


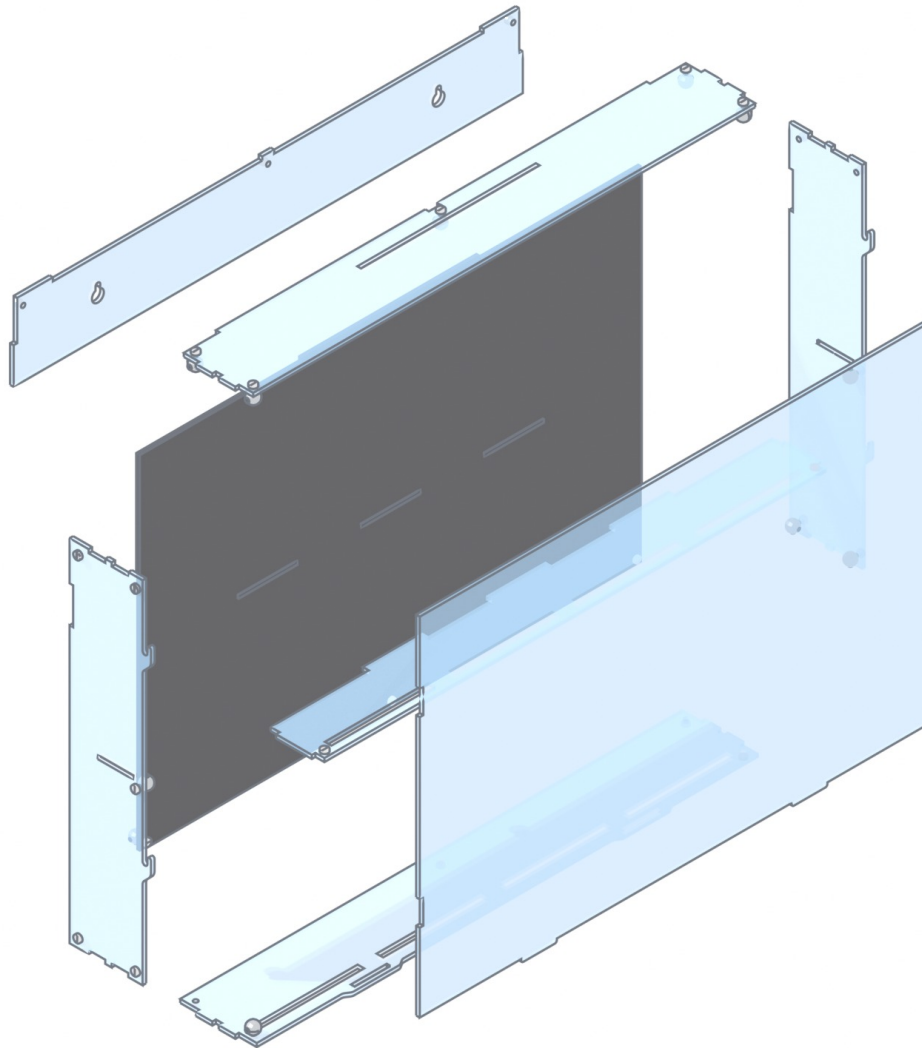

ASSEMBLY GUIDE

Graded Card Display Case

4 × 2 slabs · 428 × 295 × 68 mm · 3 mm clear acrylic, gloss black back



In the box



8 acrylic panels

black back, bottom, top, 2 sides, front cover, hanger panel and the shelf



12 fixing cubes

4 × 3-way and 8 × 2-way



28 fixing screws

M3 × 5 mm, for the cubes



Flat-head screwdriver


for the fixing screws



Wall fixing set

2 rawl plugs and 2 screws

To hang it you'll also need: a drill, a pencil, a spirit level and a crosshead screwdriver for the wall screws.

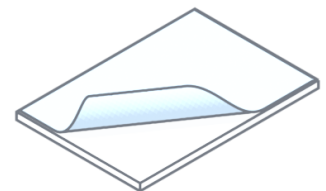

Two kinds of cube

Each cube has tapped holes on the faces that take a screw. In every step, a numbered circle (3 or 2) shows which kind goes where.



③

3-way cube

Holes on three faces – for the four back corners of the case.



②

2-way cube

Holes on two faces – everywhere else.

Which slabs fit

Graded slabs up to 87 × 139 × 9 mm, from PSA, Beckett, CGC, SGC and TAG, in any slot. Thick-card holders don't fit.

Snug, not tight

Tighten each screw until it's snug. Overtightening can crack the acrylic.

Soft surface


Build on a clean towel or rug so nothing gets scratched.

BEFORE YOU START

Peel the protective film off every panel

Every panel, including the black ones, has a thin film on **both sides**. If any is left on, the case will look cloudy.


- 1 Lift a corner with your fingernail.
- 2 Peel it back slowly and evenly.
- 3 Turn the panel over and do the other side.

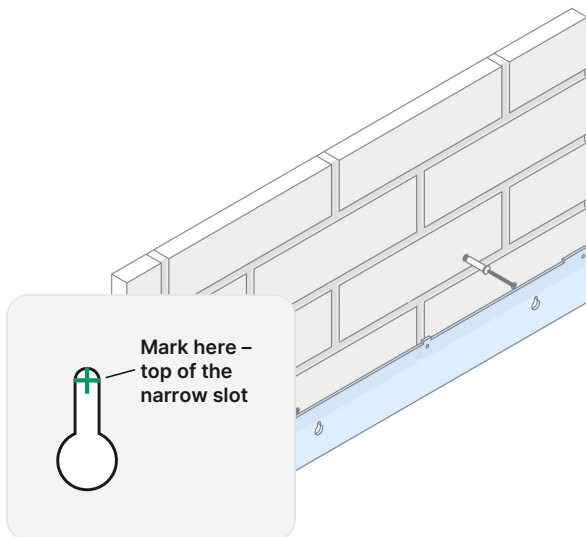


1 Mark the wall




Use the hanger panel as your drilling template. Hold it level where you want the top of the case and mark the wall at the top of each keyhole's narrow slot (see the close-up). Drill, push in the rawl plugs and screw in the screws with a crosshead screwdriver – not all the way, so the keyholes can hook on.

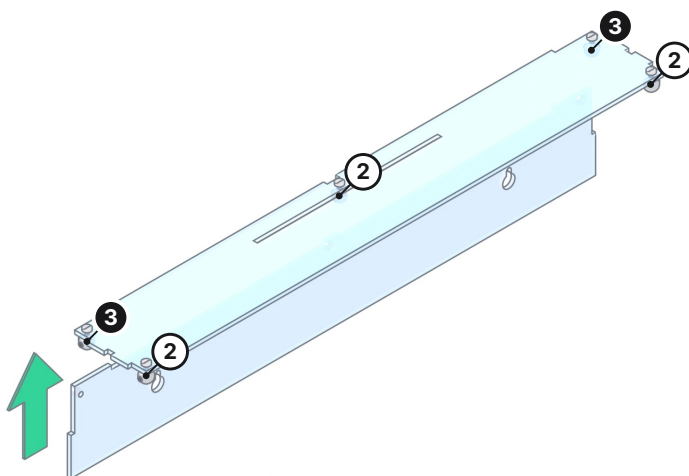


2 Attach the hanger panel to the top

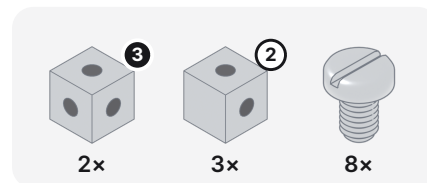


Screw a 3-way cube to each back corner of the top panel and 2-way cubes to the middle of its back edge and to each front corner. Then slot the hanger panel's tabs into the top's back edge and screw it to the three back cubes.

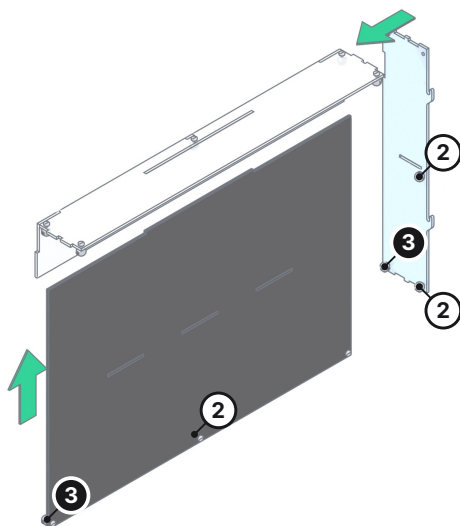


3 Add the right side and back

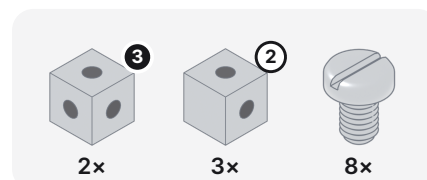


Screw a 3-way cube to the right side's bottom back corner and 2-way cubes to its bottom front corner and middle hole, then screw it to the top. Screw 2-way and 3-way cubes to the middle and left-hand corner of the back's bottom edge, push it into the top's slot and screw it to that 3-way cube.

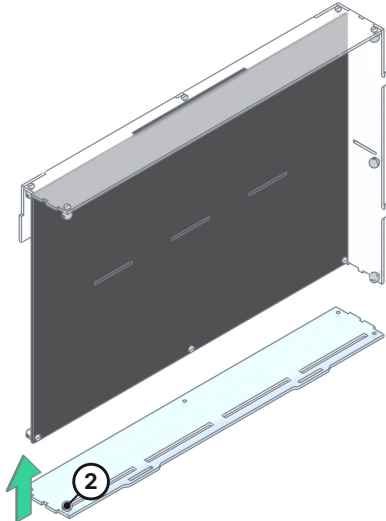

4 Attach the bottom

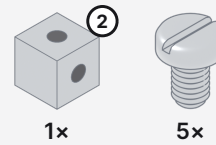


Screw a 2-way cube to the bottom panel's left-hand front corner. Fit the bottom so its tabs lock into the right side and the back stands on it, then screw it to every cube along its edges.

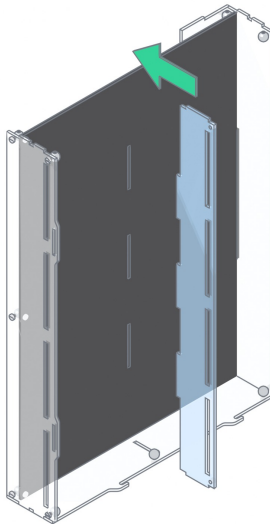


5 Slide in the shelf




Lay the case on its right side. Slide in the shelf – side tab in the right side's slot, back tabs through the black back – and screw it to the cube in the middle of the right side while there's room for the screwdriver. Its other screw goes in at the next step.

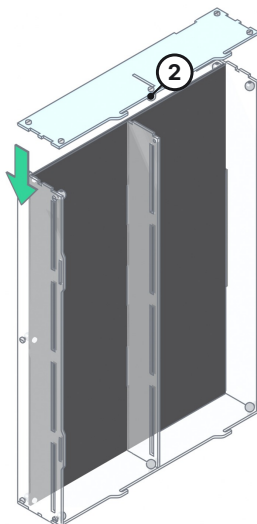

6 Fit the left side

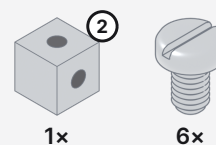


With the case still on its side, screw a 2-way cube to the left side's middle hole and lower the side on so every tab goes into its slot. Screw it to all the cubes, then screw the shelf to that cube.

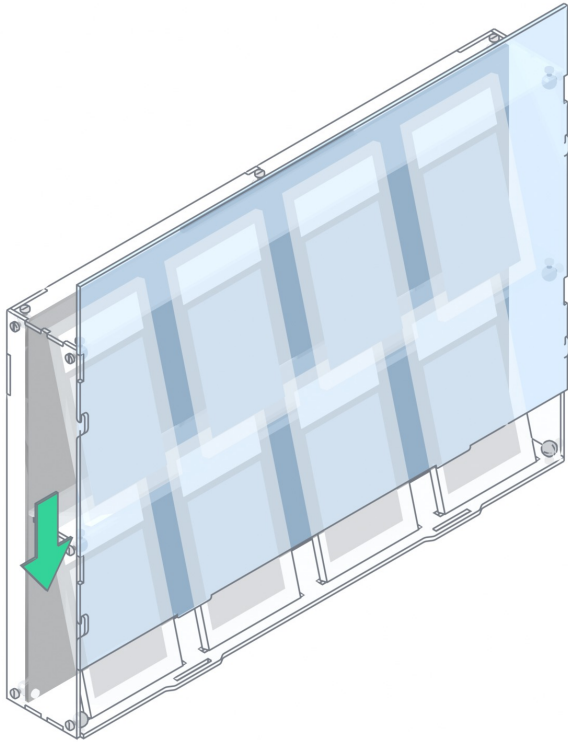

7 Hang it and fill it


Stand the case up, hook its keyholes over the wall screws and let it drop so it locks in place. Stand each slab in its slot, bottom edge first, and let it lean back against the black back – see below. Then lower the front cover in from above until its tabs sit in the bottom panel.

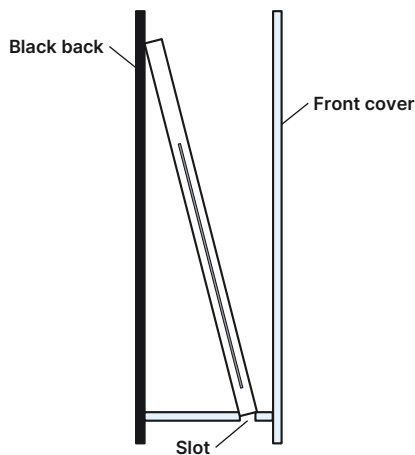

Putting a slab in

Hold the slab upright and set its bottom edge in its slot, then let it lean back until it rests on the black back. The slot is narrower than the slab, so the slab sits on the slot's front edge and can't slip through or slide out.

Swapping a slab: lift the front cover off first, then lift the slab straight up out of its slot.

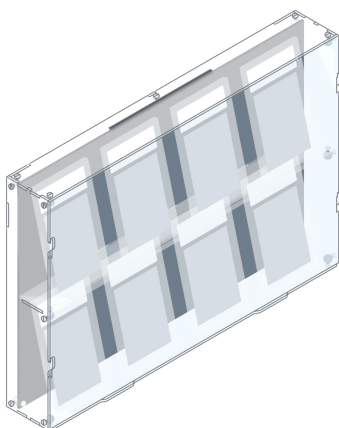

All done – enjoy it!

Looking after it: dust with a soft, dry microfibre cloth. Don't use glass cleaner, alcohol or solvents, as they cloud acrylic.

Opening it: lift the front cover straight up to take slabs out or swap them around.

Stuck? We're happy to help – get in touch at boxxco.co.uk