



FITTING GUIDE


PlayStation Display Stand

For LEGO® set 72306 · 388 × 172 × 311 mm · acrylic stand with a printed back

In the box


-  **1 base**
320 × 172 mm, 8 slots
-  **A 2 cross pieces**
the two are the same, notch on top, one long tab
-  **B 2 uprights**
the two are the same, slot underneath, one tall end
-  **C 1 printed back**
printed, with the symbols

You won't need any tools. Every part pushes in by hand: if one feels stiff, check it's the right way round rather than pushing harder.

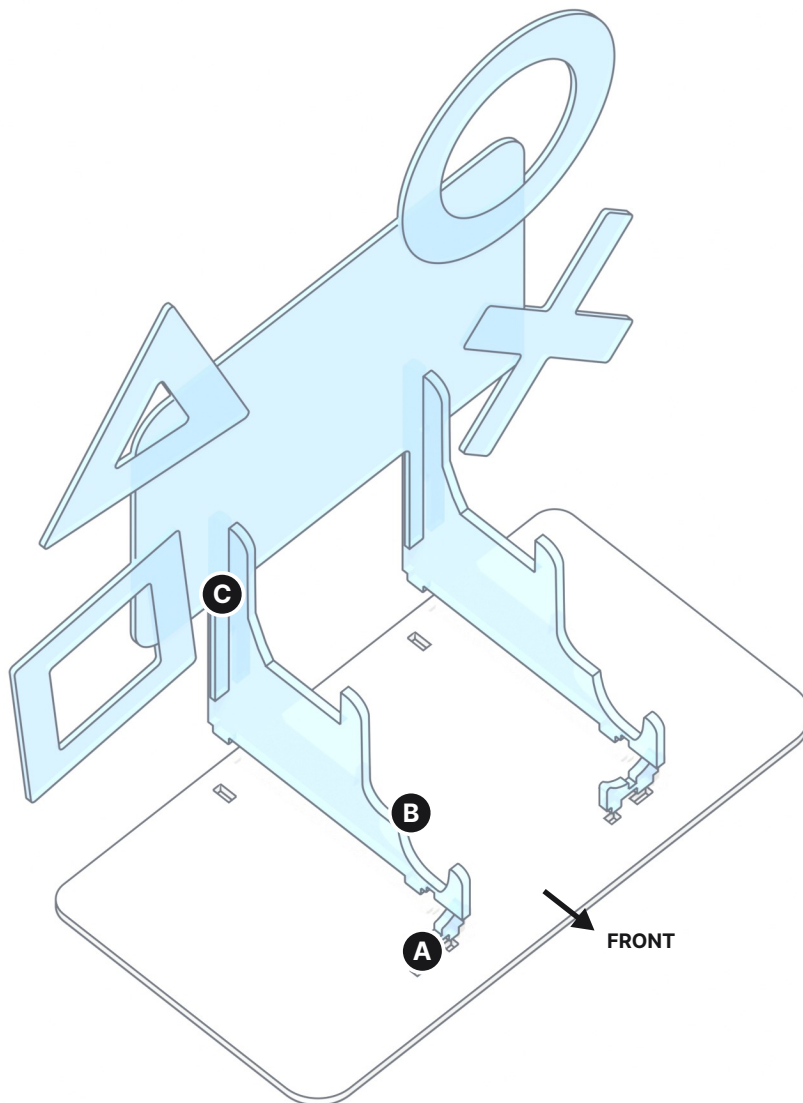

Where each part goes

Every clear part has a letter, and you fit them in letter order. Here's the base from above, front at the bottom: each part stands over its slots, and a triangle marks the long tabs and tall ends.

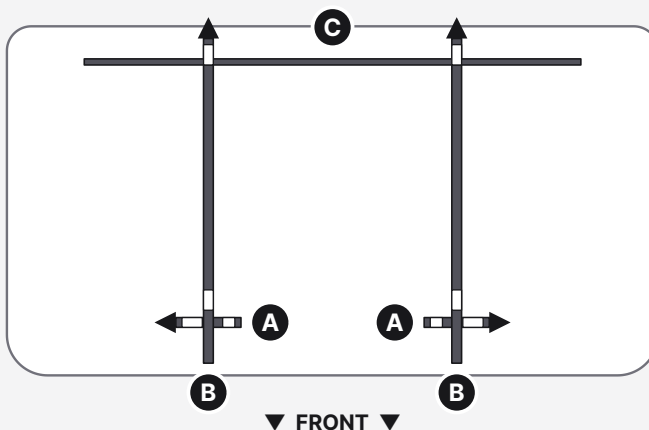


BEFORE YOU START

Peel the protective film off every part

Most parts have a thin film on **both** sides. If any is left on, they will look cloudy.

- 1 Lift a corner with your fingernail.
- 2 Peel it back slowly and evenly.
- 3 Turn the part over and do the other side.

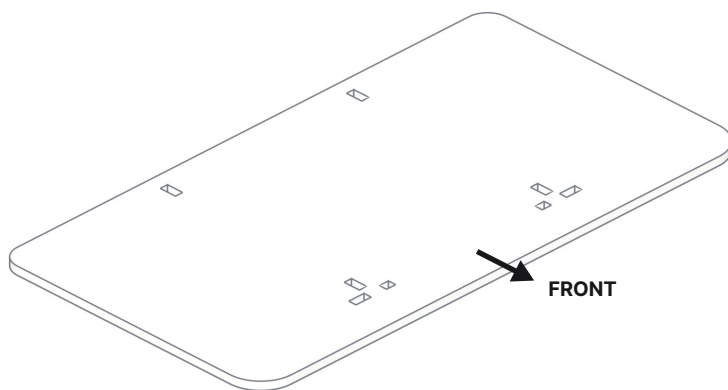


1 Lay out the base



▼ this edge to the FRONT

1x

Lay the base flat on a table, with the **six slots in two groups of three nearest you**. The other two are near the back edge. **Check:** the more rounded corners are at the front.

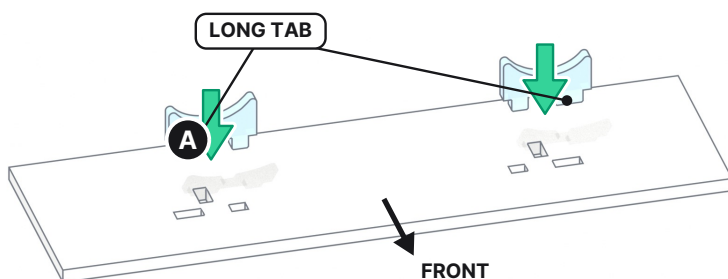


2 The cross pieces

long tab → OUTSIDE

A

2x

The two cross pieces (A) are the same. Push each one into its two slots nearest the front, notch on top, with the **long tab to the outside**. They only fit one way. **Check:** both long tabs are at the outside and pushed right down.

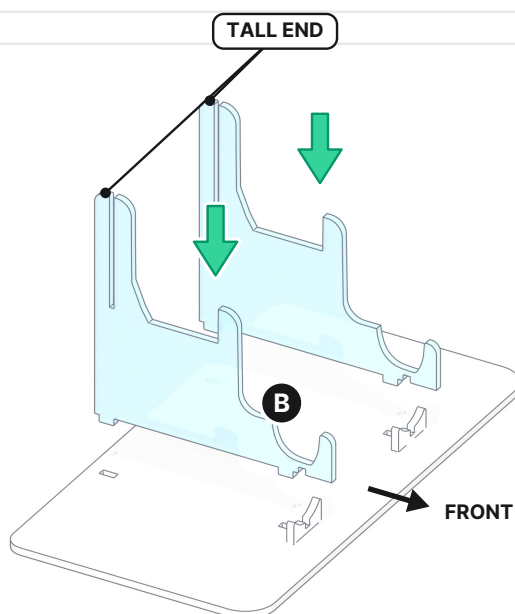


3 The uprights

tall end → BACK ↓

B

2x


The two uprights (B) are the same. Lower each one over a cross piece, **tall end to the back**: its slot underneath goes over A's notch and its tabs into the base. **Check:** both tall ends are at the back, every tab right down.

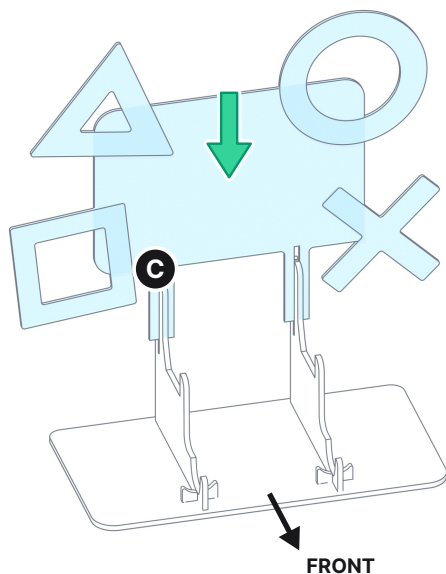

4 The printed back



Hold part C with its **printed side to the front**, triangle at the top left. Lower its slots over the tall ends of the uprights (B) until it stands on the base. **Check:** from the front you see the printed side, triangle at the top left.

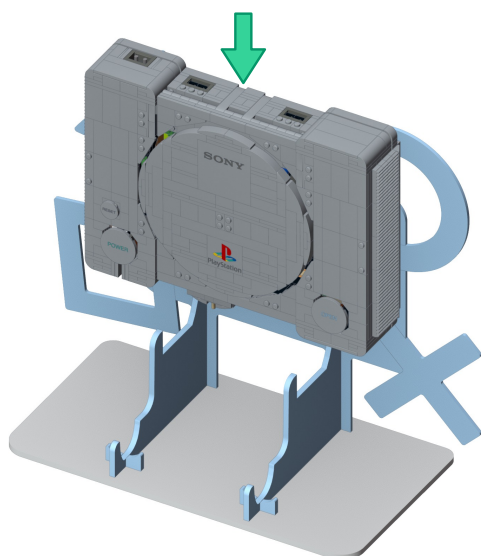

5 Stand the console on

Hold the console upright, with the SONY logo facing you and the right way up, and let the controller hang from its cable. Lower it straight down onto the flat tops of the uprights, in front of the printed back. **Check:** it sits level, close up against the tall ends of the uprights.



6 Sit the controller in

Hold the controller with its buttons facing you and lower its two grips into the cups at the front of the stand. Let the spare cable lie on the base between the uprights. **Check:** it leans back a little and doesn't touch the console.



All done – enjoy it!

Looking after it: dust with a soft, dry microfibre cloth. Don't use glass cleaner, alcohol or solvents, as they cloud acrylic.

Moving it: lift the controller out, then lift the console straight up off the uprights. Carry the stand by its base, never by the printed back.

Stuck? We're happy to help – get in touch at boxxco.co.uk